


TS JD Poly

Manual 09052001a

All JD poly/ CM poly

1. Attach the sensor to the mounting bracket as shown.

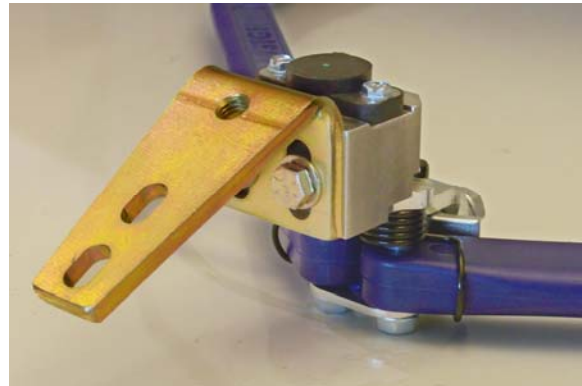


2. Attach bracket to snout.
 - Use provided button head bolt in rear hole.
 - Re-use previously existing hardware in front hole.
3. Adjust sensor height.
 - The sensor should be as far into the snout as possible without causing the arms to rub the bottom of the snout.



HEADSIGHT INC.
HARVESTING SOLUTIONS



4. Install bubble shield using provided screws.

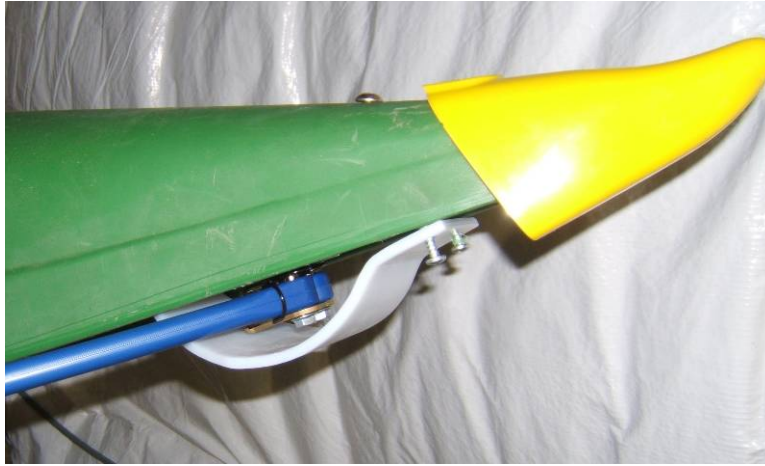

Crop sensor mounting kit



1- B2711 -Mounting kit complete

1- HT2711-Bracket

1- 08200115 -Bolt M10x50

2- 08200134 -Bolt Hex 5/16" x .75"

2- 08200133 -Washer 5/16"

1- HT2694 -bubble tip (not shown)

AR- 08200107 -Screws

AR- 08100101 -Cable clamp small

AR- 08100102 -Cable clamp large

AR- 08300102 -Zip ties