


TS AGCO Poly


Manual 09052004a

All AGCO poly

1. Attach the crop sensor to the provided mounting bracket.



The sensor should be as far up into the snout as possible without causing the arms to rub the bottom of the snout frame.

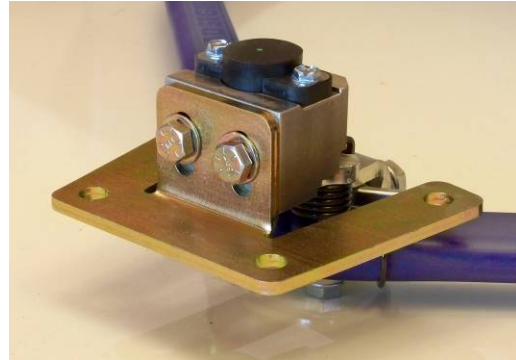

2. Cut out the poly as indicated by the yellow box at right.
 - o Make sure to leave a lip of approximately 1" remaining to attach the bracket to as indicated by the red box at right..
 - o Use a large drill bit to make rounded corners.



3. Insert bracket above lower lip of the snout. Attach bracket to snout with self-tapping screws provide.



Crop sensor mounting kit



- 1- B2721 -Mounting kit complete

- 1- HT2721 -Bracket
- 4- 08200102 -Screws
- 2- 08200134 -Bolt Flange 5/16" x .75"
- 2- 08200133 -Washer 5/16"
- 1- HT2694 -bubble tip (not shown)
- AR- 08200107 -Screws
- AR- 08100101 -Cable clamp small
- AR- 08100102 -Cable clamp large
- AR- 08300102 -Zip ties

HEADSIGHT INC.
HARVESTING SOLUTIONS

