


TS GVL Poly

Manual 09052008a

All new GVL/ All Drago poly

1. Attach the sensor to the mounting bracket as shown.

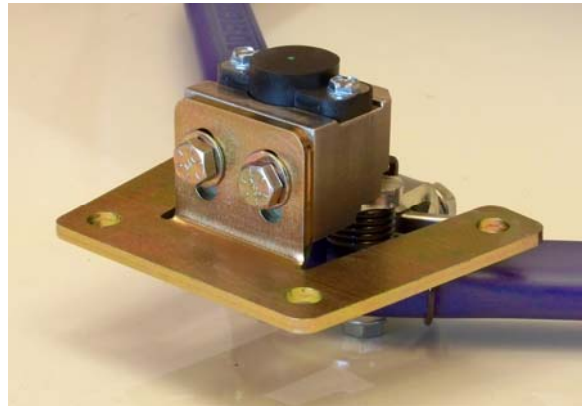

2. Attach bracket to snout using provided screws.

3. Adjust sensor height.

- o The sensor should be as far into the snout as possible without causing the arms to rub the bottom of the snout.



HEADSIGHT INC.

HARVESTING SOLUTIONS



4. Install bubble shield using provided screws.



Crop sensor mounting kit



- | | | |
|-----|----------|---------------------------|
| 1- | B2714 | -Mounting kit complete |
| 1- | HT2714 | -Bracket |
| 4- | 08200102 | -Screws |
| 2- | 08200134 | -Bolt Flange 5/16" x .75" |
| 2- | 08200133 | -Washer 5/16" |
| 1- | HT2694 | -bubble tip (not shown) |
| AR- | 08200107 | -Screws |
| AR- | 08100101 | -Cable clamp small |
| AR- | 08100102 | -Cable clamp large |
| AR- | 08300102 | -Zip ties |